


INSTRUCTIONS TO SET SNAPS WITH W-1 or W-3

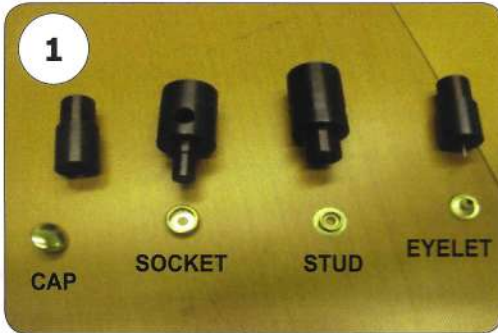

Lay out the 4 pcs. snaps with each die according to the picture.



After W-1 Machine has been bolted to a table remove plate from the machine.



Take the SOCKET DIE and screw it to the threaded rod.



Slip CAP DIE into the bottom hole of the machine.



Lay down the CAP on the bottom die as shown in the picture.



Put fabric on top of the CAP and place SOCKET over the fabric. Align the two pcs. by holding them with your fingers.




Press the handle of the W-1 machine down to set the CAP and the SOCKET together.



Release the handle and take out the fabric. As you can see CAP and SOCKET pieces are SET.



Replace CAP & SOCKET dies. Insert the STUD DIE to the threaded rod and slip EYELET DIE to the bottom hole of machine.

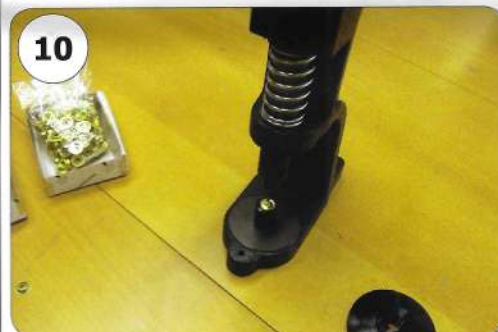

Lay down the EYELET on the bottom die as shown in the picture.



Put the fabric on top of the EYELET and the STUD over the fabric. Align them by holding the stud with your fingers. Press handle as before.



Release the handle and remove fabric. STUD and EYELET has been set.