


Contents

1 x Pair bed head brackets.


4 x bolts & nuts

4 x coach bolts


10 x self tapping wood screws

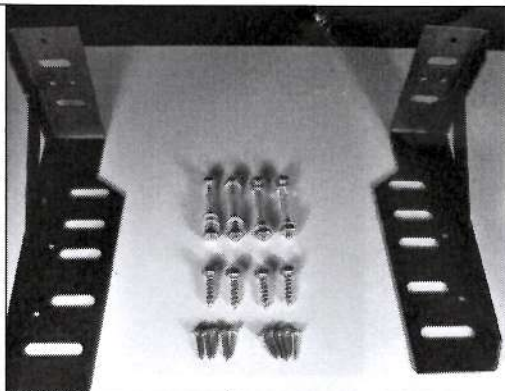

## Bed Brackets - Installation Instructions

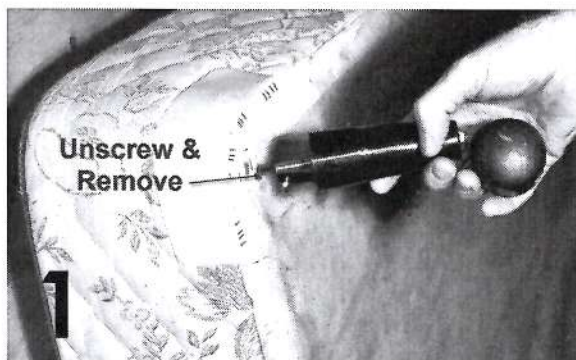

Unscrew and remove castor wheel.

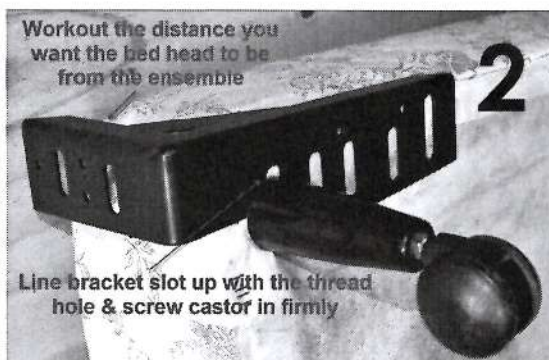

Workout the distance you want the bed head to be from the ensemble mattress & base then line the bracket slot up with the thread hole that matches that distance and screw castor in firmly.



Fit both brackets to base



Place bed head on the floor and sit it flush against the brackets ready to measure bracket position.




Make a small mark on bed head where the bracket will be attached.



Mark screw hole position.


Please turn over to continue Instructions

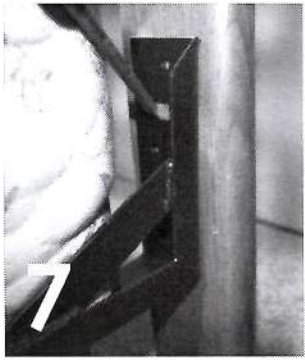


7 Mark bolt hole positions.




8 Remove castors and bed head brackets from the ensemble ready for attaching to bed head.

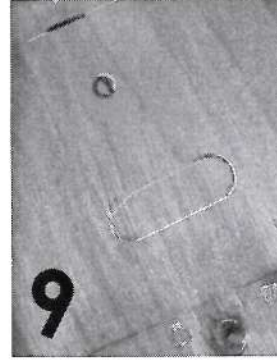


9 Lay bed head flat on a bench or flat surface & sit the brackets on the bed head. Line up brackets with pre-drawn markings for screws or bolts depending on the thickness & weight of the bed head.

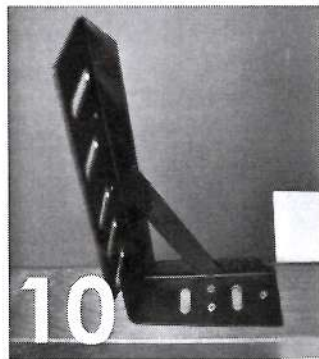

10 For bed heads that are lightweight or sitting on the floor only use self tapping wood screws provided and screw into marks from Step 5.

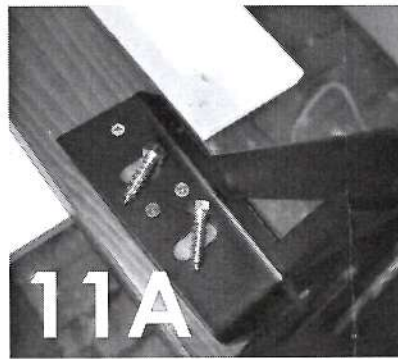

11A This option is for heavier or larger bed heads. Attach with self tapping screws and coach bolts. Before screwing in coach bolts pre-drill with a 3mm drill bit and then screw in with a spanner or socket and ratchet. Tighten firmly but don't over tighten.

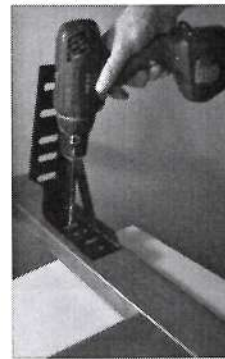

This option is for bed heads with large legs and upholstered bed heads.

Attach with bolts and nuts.

Before inserting bolts pre-drill a hole with an 8mm drill bit. Insert bolts and washers and then tighten nut firmly but don't over tighten.

When brackets are fitted to bed head reattach to bed ensemble frame.



When the bed head & brackets are attached to the ensemble, screw the supplied self tapping wood screws into the ensemble frame to stop the brackets from moving sideways.

